



Ranger Raptor 2.0L DPF model

1. Remove rear tail pipe and muffler assembly from the vehicle.
2. Remove centre connecting and DPF pipe from the vehicle.
3. Fit the DPF pipe to the DPF flange using the factory nuts and bolts.
4. Fit the diff pipe section to the DPF pipe and tighten finger tight with the supplied 3/8 UNC nuts.
5. Check over exhaust making sure everything is aligned and then tighten all bolts and nuts from the front to back of the vehicle.
6. Enjoy your IGNITE exhaust!